

Addendum to the Instruction Manual: IntelliScope® Base Hardware Kit (Rev. B)

Please follow the assembly procedure in the telescope instruction manual to assemble the base. The only part not mentioned in the manual is the azimuth encoder spacer washer. This piece is included in the hardware kit packaged with the IntelliScope base. (Figure 1) This washer should be assembled in between the azimuth encoder board and

the top baseplate when installing the encoder board to the Dobsonian base as shown in Figure 2. Proper installation of this washer will ensure correct spacing between the azimuth encoder board and azimuth encoder disk; which, in turn, will result in greater accuracy in azimuth readouts when using the IntelliScope Object Locator.

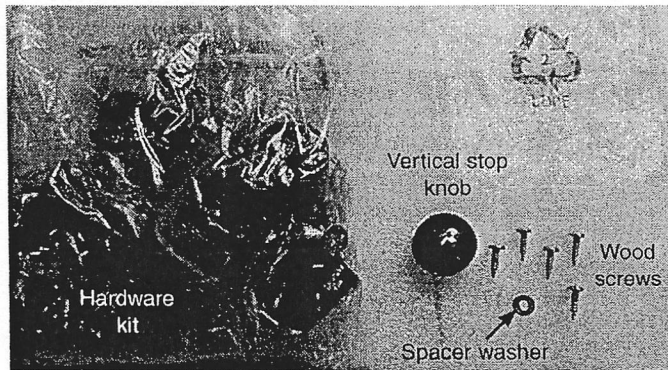


Figure 1. The spacer washer is located in the bag containing wood screws and a vertical stop knob.

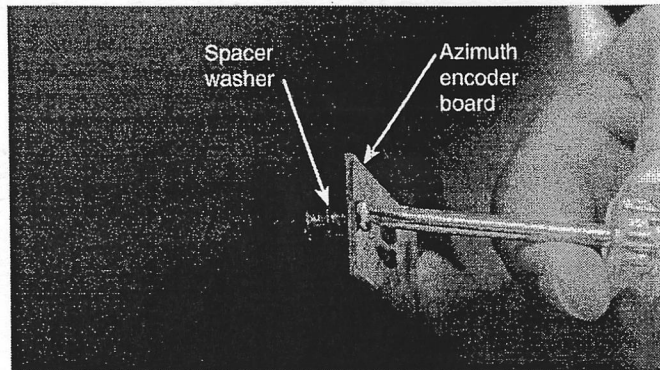


Figure 2. The spacer washer goes between the azimuth encoder board and the top baseplate of the Dobsonian base.

 **ORION®**
TELESCOPES & BINOCULARS
Providing Exceptional Consumer Optical Products Since 1975

Customer Support (800) 676-1343
E-mail: support@telescope.com

Corporate Offices (831) 763-7000
89 Hangar Way, Watsonville, CA 95076